
User manual Wireless Keyboard Case (K,KM,E)

Step 1: Installing Your iPad into the Keyboard Case

- 1. The camera hole should be aligned with the camera.
- 2. When closing the magic keyboard case, please note that the iPad should be fully attached to the magnetic cover. Avoid detachment due to loose fit.

Step 2: Turn On the Device & LED Indicator

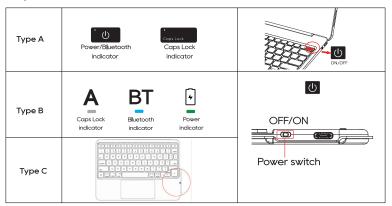

Step 3: Connect with Your iPad

Type A:

- 1. Long press the (U) button to turn the device on, the LED indicator will light up and then the blue light flashes, the keyboard is in Bluetooth pairing mode.
- 2. Open your iPad >> Settings >> Bluetooth, search for "iPad Keyboard" in the list, and then click it to connect.
- 3. The keyboard does not support connecting to multiple devices simultaneously; you need to press Fn and C to disconnect the current device before reconnecting to a new one.

Type B&C:

- 1. Push the power switch to turn the device on, the Bluetooth LED indicator light flashes, the keyboard is in Bluetooth pairing mode.
- Open your iPad >> Settings >> Bluetooth, search for "Wireless Keyboard" in the list, and then click it to connect.
- 3. The keyboard does not support connecting to multiple devices simultaneously; you need to press or or to disconnect the current device before reconnecting to a new one.

Power Supply - Notes:

- 1. The keyboard case is charged via the TYPE-C interface.
- 2. Power adapter is not included.
- 3. Please to fully charge before using it for the first time or when it has not been used for a long time.
- 4. Please store and charge the device at normal temperatures conditions.

Bluetooth Conenction - Notes:

- 1. When the Bluetooth indicator light stops flashing, it indicates that the device is connected.
- 2. After turning on the keyboard, if there is no signal input for more than 10 minutes, the keyboard will automatically enter standby mode. At this point, you only need to double-click any button to reactivate the keyboard (no need to turn the power on/off and reconnect).
- 3. When reconnecting Bluetooth, there will be a slight delay of about 3s, the touchpad needs to retrieve and connect to Bluetooth.
- 4. After the initial successful connection, it will automatically connect back to the last paired device, every time it is turn on.
- 5. You can swipe right on the iPad's home screen to find the bluetooth icon (some version shown on keyboard icon) which shown the battery level for the keyboard, see Figure 1.



Figure 1

What should I do if the keyboard can not connect to the iPad?

- 1. Ensure that the keyboard has been paired via Bluetooth.
- 2. The Bluetooth keyboard is within a range of 33 feet.
- Please delete all devices from the iPad's Bluetooth list, then restart the iPad's Bluetooth and restart the keyboard.
- 4. Multi-device connection is not supported via keyboard case.
- 5. When the battery level is low, the Bluetooth connection may be interrupted.

How to change between lowercase and uppercase on the keyboard?

- 1. The caps lock default function is switch languages. So to type capital letters on the keyboard, please turn off the cap lock default function first.
- 2. Go to your iPad settings—Keyboards setting-hard ware keyboard—turn off the toggle of switch languages using caps lock, then you can change between lowercase and uppercase by press the caps lock key.

Shortcut key Combinations

Please mind that if your keyboard has the following keys to make it work, as it just for optional functions.

Key Combinations	Functions		
+ any letter	Input some special characters		
+ any letter			
option + Space	Switch language input method		
control + Space	(Wubi input method is not supported)		
fn + option	Adjust color backlight		
fn + cmd	Adjust backlight brightness		

Keyboard Shortcuts

Type A:

The shortcut keys needs to be added with to be implemented.

The special symbols needs to be added with to be implemented.

Button icon	Instruction	Button icon	Instruction
esc 、	Undo input	⊳⊪ & 7	Play/Pause
O ! 1	Decrease brightness	8	Next track
© @ 2	Increase brightness	ر 9 0	Mute
# 3	Virtual keyboard wake-up	Φ) 0	Volume down
Q \$ 4	Enable iPad search	(d)) —	Volume up
© % 5	Voice wake-up	(%) + =	Bluetooth connection
6	Previous track	delete	Delete

Туре В:

Directly click the the shortcut keys to be implemented.

Button icon	Instruction	Button icon	Instruction
esc	Undo input	DD	Next track
· Ö.	Decrease brightness	Д	Mute
-;Ċ;-	Increase brightness	₽	Volume down
88	Open the recently used window	□ (3))	Volume up
Q	Enable iPad search	A	Lock screen
Q	Voice wake-up	0	Bluetooth connection
44	Previous track	×	Screenshot
⊳II	Play/Pause	ம	Power Button

Tips:

- Some features are optional and only applicable to pointed versions, please refer to the version you have received.
- 2. To save power, If there is no single more than 30s, the backlight will automatically turn off. When you press any key, the backlight will turn on again. (some versions, the backlight automatically turns off after 10s.)

Touchpad/Gestures

- 1. Ensure that the iPadOS operating system is ISO 15.0 or higher;
- 2. After connect to Bluetooth. Go to iPad -> Settings -> General -> Touchpad Tap to Tap / Two-finger assist point (open) Assistive Touch On;
- 3. You will see a cursor appear on the iPad screen, when trackpad is successfully turned on;
- 4. Then go to iPad -> Settings General-Touchpad-Trackingspeed (adjust to suitable speed).

One Finger



Tap: Press with one finger until it feels a little bit.

Tap and hold: Press and hold with one finger.



Open "Notification Center": Move the pointer to the status icon in the upper left corner of the screen with one finger, then tap or swipe up again with one finger.

Open "Control Center": Move the pointer to the status icon in the upper right corner of the screen with one finger, then tap or swipe up again with one finger.



Drag: Tap and hold the item, then slide your finger on the touchpad to move it.



Open the Dock: Swipe the pointer across the bottom of the screen with one finger.

Go to the home screen: When the dock appears, swipe the pointer across the bottom of the screen again.



Auxiliary tap: Move the cursor to the APP icon with one finger, then tap or tap with two fingers to open the APP menu.



Turn on the Today view: When the home screen or lock screen is visible, swipe right with two fingers.

Open search from the home screen: Swipe down with two fingers.



Scroll up or down: Swipe up or down with two fingers.

Scroll left or right:Swipe left or right with two fingers.



Zoom: Place two fingers close together, spread to zoom in, or pinch to zoom out.

Three Fingers



Open the APP switcher: Swipe up with three fingers, pause and then lift your finger



Go to the home screen: Swipe up with three fingers



Switch between open apps: Swipe right with three fingers, then swipe left or right to switch.

Warranty and Technical Support Thank you for purchasing our products. Each product is manufactured under strict quality control. If you have any questions about the product, please contact our brand support or visit our official

website to obtain the latest user manual.

Please contact Apple Customer Service for settings related to the iPad. Examples of issues include: Non-functioning keys (e.g., I, J, L, K, M)

Keystroke repetition

Keystroke delays

Tracking sensitivity

Assistive Touch functionality

Caps lock malfunctions

How to configure the QWERTY layout (e.g., Why i press A but get a Z)

Inability to switch input methods